





Schurter

Schurter



SCHURTER
ELECTRONIC COMPONENTS


CPS16-LA00A10-SNCSNCWF-RI0YRVAR-W1062-S

Tau Wae:	CPS16-LA00A10-SNCSNCWF-RI0YRVAR-W1062-S
Kaihanga / Waitohu:	Schurter
Whakaahuatanga hua	SWITCH PUSHBUTTON SPST 100MA 42V
Ngā Rauemi:	 CPS16-LA00A10-SNCSNCWF-RI0YRVAR-W1062-S.pdf
RoHS Tūnga	 Whakahaerehia te kore utu / RoHS
Tuhinga mai i	Hong Kong
Te Ara Tuhi	DHL/Fedex/TNT/UPS/EMS

TONO MO TE WHAKAHUA

Ko te whakaahua he tohu. Tirohia nga korero mo nga taipitopito hua.











 
 
Ngā whakaaturanga o CPS16-LA00A10-SNCSNCWF-RI0YRVAR-W1062-S

TAU WAE	CPS16-LA00A10-SNCSNCWF-RI0YRVAR-W1062-S
KAIHANGA	Schurter
WHAKAAHUATANGA	SWITCH PUSHBUTTON SPST 100MA 42V
WHAKAHAERE TOKO WHAKAHAERE / ROHS TŪNGA	Whakahaerehia te kore utu / RoHS
PEPA RARAUNGA	 CPS16-LA00A10-SNCSNCWF-RI0YRVAR-W1062-S.pdf
WHAKAAETANGA NGAOHIKO - DC	60V
WHAKAAETANGA NGAOHIKO - AC	42V
MOMO	Capacitive, Illuminated
KĀHUA WHAKAMUTUNGA	Wire Leads
WHAKAWHITI MAHINGA	Off-On
RAUPAPA	CPS
PIHANGA WHAKAPAE PAEPAE	Circular - 16.10mm Dia
PACKAGING	Bulk
TAE MAHI	-40°C ~ 60°C
MOMO TAE	Panel Mount, Front
TAUMATA WHAKAARO MOE (MSL)	1 (Unlimited)
TE MAHI MOMO	-
WHAKAHAERE TOKO WHAKAHAERE / ROHS TŪNGA	Lead free / RoHS Compliant
TIAKI INGOA	IP67 - Dust Tight, Waterproof
WHAKAKAMAHI WHAKAKUKU (NOMINAL)	5 ~ 28 VDC
MOMO WHAKAMARAMA, TAE	LED, Yellow/Red
NGĀ ĀHUATANGA	Finger Guide, AUS Symbol
TE ORANGA RAWA	-
WHAKAAHUATANGA TAIPITOPITO	Pushbutton Switch SPST Capacitive, Illuminated Panel Mount, Front
WHAKATAURANGA ONAMATA	100mA (AC/DC)
TAE - KAIHOAHOA / KAPORO	Silver
TAKAHANGA	SPST
MOMO KAIHOKO	Round, Button, Flush

Ngā tūtohu e hāngai ana

Schurter CPS16-LA00A10-SNCSNCWF-RI0YRVAR-W1062-S	Kaitoha CPS16-LA00A10-SNCSNCWF-RI0YRVAR-W1062-S	Kaiwhakarato CPS16-LA00A10-SNCSNCWF-RI0YRVAR-W1062-S
Utu CPS16-LA00A10-SNCSNCWF-RI0YRVAR-W1062-S	Pikitia CPS16-LA00A10-SNCSNCWF-RI0YRVAR-W1062-S	Whakaahua CPS16-LA00A10-SNCSNCWF-RI0YRVAR-W1062-S
CPS16-LA00A10-SNCSNCWF-RI0YRVAR-W1062-S Pepa Raraunga PDF	CPS16-LA00A10-SNCSNCWF-RI0YRVAR-W1062-S Tango Whakahoki	Tapunga CPS16-LA00A10-SNCSNCWF-RI0YRVAR-W1062-S
Hokona CPS16-LA00A10-SNCSNCWF-RI0YRVAR-W1062-S	Hokona CPS16-LA00A10-SNCSNCWF-RI0YRVAR-W1062-S	Hokona Schurter CPS16-LA00A10-SNCSNCWF-RI0YRVAR-W1062-S
Schurter CPS16-LA00A10-SNCSNCWF-RI0YRVAR-W1062-S	Kaiwhakarato Schurter	Kaitoha Kaatawhai Schurter
Schurter CPS16-LA00A10-SNCSNCWF-RI0YRVAR-W1062-S	Schurter Inc. CPS16-LA00A10-SNCSNCWF-RI0YRVAR-W1062-S	

Ngā Hua e hāngai ana

 <p>CPS16-LA00A10-SNCSNCWF-RI0YRVAR-W1063-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p style="text-align: center; background-color: #ccc; padding: 2px;">RFQ</p>	 <p>CPS16-LA00A10-SNCSNCWF-RI0YRVAR-W1058-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p style="text-align: center; background-color: #ccc; padding: 2px;">RFQ</p>
 <p>CPS16-LA00A10-SNCSNCWF-RI0YRVAR-W1061-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p style="text-align: center; background-color: #ccc; padding: 2px;">RFQ</p>	 <p>CPS16-LA00A10-SNCSNCWF-RI0YRVAR-W1066-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p style="text-align: center; background-color: #ccc; padding: 2px;">RFQ</p>
 <p>CPS16-LA00A10-SNCSNCWF-RI0YRVAR-W1059-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p style="text-align: center; background-color: #ccc; padding: 2px;">RFQ</p>	 <p>CPS16-LA00A10-SNCSNCWF-RI0YRVAR-W1065-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p style="text-align: center; background-color: #ccc; padding: 2px;">RFQ</p>
 <p>CPS16-LA00A10-SNCSNCWF-RI0YRVAR-W1067-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p style="text-align: center; background-color: #ccc; padding: 2px;">RFQ</p>	 <p>CPS16-LA00A10-SNCSNCWF-RI0YRVAR-W1060-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p style="text-align: center; background-color: #ccc; padding: 2px;">RFQ</p>
 <p>CPS16-LA00A10-SNCSNCWF-RI0YRVAR-W1068-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p style="text-align: center; background-color: #ccc; padding: 2px;">RFQ</p>	 <p>CPS16-LA00A10-SNCSNCWF-RI0YRVAR-W1064-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p style="text-align: center; background-color: #ccc; padding: 2px;">RFQ</p>
 <p>CPS16-LA00A10-SNCSNCWF-RI0YRVAR-W1056-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p style="text-align: center; background-color: #ccc; padding: 2px;">RFQ</p>	 <p>CPS16-LA00A10-SNCSNCWF-RI0YRVAR-W1057-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p style="text-align: center; background-color: #ccc; padding: 2px;">RFQ</p>