





Schurter




CPS19-LA00A10-SNCCWTNF-AI0YLVAR-W1046-S

Tau Wae:	CPS19-LA00A10-SNCCWTNF-AI0YLVAR-W1046-S
Kaihanga / Waitohu:	Schurter
Whakaahuatanga hua	SWITCH PUSHBUTTON SPST 100MA 42V
Ngā Rauemi:	 CPS19-LA00A10-SNCCWTNF-AI0YLVAR-W1046-S.pdf
RoHS Tūnga	 Whakahaerehia te kore utu / RoHS
Tuhinga mai i	Hong Kong
Te Ara Tuhi	DHL/Fedex/TNT/UPS/EMS

TONO MO TE WHAKAHUA

Ko te whakaahua he tohu. Tirohia nga korero mo nga taipitopito hua.

Ngā whakaaturanga o CPS19-LA00A10-SNCCWTNF-AI0YLVAR-W1046-S

TAU WAE	CPS19-LA00A10-SNCCWTNF-AI0YLVAR-W1046-S
KAIHANGA	Schurter
WHAKAAHUATANGA	SWITCH PUSHBUTTON SPST 100MA 42V
WHAKAHAERE TOKO WHAKAHAERE / ROHS TŪNGA	Whakahaerehia te kore utu / RoHS
PEPA RARAUNGA	 CPS19-LA00A10-SNCCWTNF-AI0YLVAR-W1046-S.pdf
WHAKAAETANGA NGAOHIKO - DC	60V
WHAKAAETANGA NGAOHIKO - AC	42V
MOMO	Capacitive, Illuminated
KĀHUA WHAKAMUTUNGA	Wire Leads
WHAKAWHITI MAHINGA	Off-On
RAUPAPA	CPS
PIHANGA WHAKAPAE PAEPAE	Circular - 19.10mm Dia
PACKAGING	Bulk
TAE MAHI	-40°C ~ 60°C
MOMO TAE	Panel Mount, Front
TAUMATA WHAKAARO MOE (MSL)	1 (Unlimited)
TE MAHI MOMO	-
WHAKAHAERE TOKO WHAKAHAERE / ROHS TŪNGA	Lead free / RoHS Compliant
TIAKI INGOA	IP67 - Dust Tight, Waterproof
WHAKAKAMAHI WHAKAKUKU (NOMINAL)	5 ~ 28 VDC
MOMO WHAKAMARAMA, TAE	LED, Yellow
NGĀ ĀHUATANGA	Ceramic Actuator, Arrow Symbol
TE ORANGA RAWA	-
WHAKAAHUATANGA TAIPITOPITO	Pushbutton Switch SPST Capacitive, Illuminated Panel Mount, Front
WHAKATAURANGA ONAMATA	100mA (AC/DC)
TAE - KAIHOAHOA / KAPORO	Clear (White Filter/Diffuser)
TAKAHANGA	SPST
MOMO KAIHOKO	Round, Button, Flush

Ngā tūtohu e hāngai ana

Schurter CPS19-LA00A10-SNCCWTNF-AI0YLVAR-W1046-S	Kaitoha CPS19-LA00A10-SNCCWTNF-AI0YLVAR-W1046-S	Kaiwhakarato CPS19-LA00A10-SNCCWTNF-AI0YLVAR-W1046-S
Utu CPS19-LA00A10-SNCCWTNF-AI0YLVAR-W1046-S	Pikitia CPS19-LA00A10-SNCCWTNF-AI0YLVAR-W1046-S	Whakaahua CPS19-LA00A10-SNCCWTNF-AI0YLVAR-W1046-S
CPS19-LA00A10-SNCCWTNF-AI0YLVAR-W1046-S Pepa Raraunga PDF	CPS19-LA00A10-SNCCWTNF-AI0YLVAR-W1046-S Tango Whakahoki	Tapunga CPS19-LA00A10-SNCCWTNF-AI0YLVAR-W1046-S
Hokona CPS19-LA00A10-SNCCWTNF-AI0YLVAR-W1046-S	Hokona CPS19-LA00A10-SNCCWTNF-AI0YLVAR-W1046-S	Hokona Schurter CPS19-LA00A10-SNCCWTNF-AI0YLVAR-W1046-S
Schurter CPS19-LA00A10-SNCCWTNF-AI0YLVAR-W1046-S	Kaiwhakarato Schurter	Kaitoha Kaatawhai Schurter
Schurter CPS19-LA00A10-SNCCWTNF-AI0YLVAR-W1046-S	Schurter Inc. CPS19-LA00A10-SNCCWTNF-AI0YLVAR-W1046-S	

Ngā Hua e hāngai ana

<div style="border: 1px solid #ccc; padding: 5px;">  <p>CPS19-LA00A10-SNCCWTNF-AI0YLVAR-W1041-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p style="text-align: center; background-color: #ccc; padding: 2px;">RFQ</p> </div>	<div style="border: 1px solid #ccc; padding: 5px;">  <p>CPS19-LA00A10-SNCCWTNF-AI0YLVAR-W1047-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p style="text-align: center; background-color: #ccc; padding: 2px;">RFQ</p> </div>
<div style="border: 1px solid #ccc; padding: 5px;">  <p>CPS19-LA00A10-SNCCWTNF-AI0YLVAR-W1040-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p style="text-align: center; background-color: #ccc; padding: 2px;">RFQ</p> </div>	<div style="border: 1px solid #ccc; padding: 5px;">  <p>CPS19-LA00A10-SNCCWTNF-AI0YLVAR-W1044-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p style="text-align: center; background-color: #ccc; padding: 2px;">RFQ</p> </div>
<div style="border: 1px solid #ccc; padding: 5px;">  <p>CPS19-LA00A10-SNCCWTNF-AI0YLVAR-W1052-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p style="text-align: center; background-color: #ccc; padding: 2px;">RFQ</p> </div>	<div style="border: 1px solid #ccc; padding: 5px;">  <p>CPS19-LA00A10-SNCCWTNF-AI0YLVAR-W1050-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p style="text-align: center; background-color: #ccc; padding: 2px;">RFQ</p> </div>
<div style="border: 1px solid #ccc; padding: 5px;">  <p>CPS19-LA00A10-SNCCWTNF-AI0YLVAR-W1049-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p style="text-align: center; background-color: #ccc; padding: 2px;">RFQ</p> </div>	<div style="border: 1px solid #ccc; padding: 5px;">  <p>CPS19-LA00A10-SNCCWTNF-AI0YLVAR-W1042-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p style="text-align: center; background-color: #ccc; padding: 2px;">RFQ</p> </div>
<div style="border: 1px solid #ccc; padding: 5px;">  <p>CPS19-LA00A10-SNCCWTNF-AI0YLVAR-W1048-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p style="text-align: center; background-color: #ccc; padding: 2px;">RFQ</p> </div>	<div style="border: 1px solid #ccc; padding: 5px;">  <p>CPS19-LA00A10-SNCCWTNF-AI0YLVAR-W1043-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p style="text-align: center; background-color: #ccc; padding: 2px;">RFQ</p> </div>
<div style="border: 1px solid #ccc; padding: 5px;">  <p>CPS19-LA00A10-SNCCWTNF-AI0YLVAR-W1051-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p style="text-align: center; background-color: #ccc; padding: 2px;">RFQ</p> </div>	<div style="border: 1px solid #ccc; padding: 5px;">  <p>CPS19-LA00A10-SNCCWTNF-AI0YLVAR-W1045-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p style="text-align: center; background-color: #ccc; padding: 2px;">RFQ</p> </div>