

Schurter

CPS22-NO00A10-SNCSNCWF-RI0GCVAR-W1034-S

Tau Wae:	CPS22-NO00A10-SNCSNCWF-RI0GCVAR-W1034-S
Kaihanga / Waitohu:	Schurter
Whakaahuatanga hua	SWITCH PUSH SPST-NO 100MA 42V
Ngā Rauemi:	CPS22-NO00A10-SNCSNCWF-RI0GCVAR-W1034-S.pdf
RoHS Tūnga	Whakahaerehia te kore utu / RoHS
Tuhinga mai i	Hong Kong
Te Ara Tuhi	DHL/Fedex/TNT/UPS/EMS

TONO MO TE WHAKAHUA

Ko te whakaahua he tohu. Tirohia nga korero mo nga taipitopito hua.

Ngā whakaaturanga o CPS22-NO00A10-SNCSNCWF-RI0GCVAR-W1034-S

TAU WAE	CPS22-NO00A10-SNCSNCWF-RI0GCVAR-W1034-S
KAIHANGA	Schurter
WHAKAAHUATANGA	SWITCH PUSH SPST-NO 100MA 42V
WHAKAHAERE TOKO WHAKAHAERE / ROHS TŪNGA	Whakahaerehia te kore utu / RoHS
PEPA RARAUNGA	CPS22-NO00A10-SNCSNCWF-RI0GCVAR-W1034-S.pdf
WHAKAAETANGA NGAOHIKO - DC	60V
WHAKAAETANGA NGAOHIKO - AC	42V
MOMO	Capacitive, Illuminated
KĀHUA WHAKAMUTUNGA	Wire Leads
WHAKAWHITI MAHINGA	Off-Mom
RAUPAPA	CPS
PIHANGA WHAKAPAE PAEPAE	Circular - 22.10mm Dia
PACKAGING	Bulk
TAE MAHI	-40°C ~ 60°C
MOMO TAE	Panel Mount, Front
TAUMATA WHAKAARO MOE (MSL)	1 (Unlimited)
TE MAHI MOMO	-
WHAKAHAERE TOKO WHAKAHAERE / ROHS TŪNGA	Lead free / RoHS Compliant
TIAKI INGOA	IP67 - Dust Tight, Waterproof
WHAKAKAMAHI WHAKAKUKU (NOMINAL)	5 ~ 28 VDC
MOMO WHAKAMARAMA, TAE	LED, Green/Cyan
NGĀ ĀHUATANGA	Finger Guide, 7 Symbol
TE ORANGA RAWA	-
WHAKAAHUATANGA TAIPITOPITO	Pushbutton Switch SPST-NO Capacitive, Illuminated Panel Mount, Front
WHAKATAURANGA ONAMATA	100mA (AC/DC)
TAE - KAIHOAHOA / KAPORO	Silver
TAKAHANGA	SPST-NO
MOMO KAIHOKO	Round, Button, Flush

Ngā tūtohu e hāngai ana

Schurter CPS22-NO00A10-SNCSNCWF-RI0GCVAR-W1034-S	Kaitoha CPS22-NO00A10-SNCSNCWF-RI0GCVAR-W1034-S	Kaiwhakarato CPS22-NO00A10-SNCSNCWF-RI0GCVAR-W1034-S
Utu CPS22-NO00A10-SNCSNCWF-RI0GCVAR-W1034-S	Pikitia CPS22-NO00A10-SNCSNCWF-RI0GCVAR-W1034-S	Whakaahua CPS22-NO00A10-SNCSNCWF-RI0GCVAR-W1034-S
CPS22-NO00A10-SNCSNCWF-RI0GCVAR-W1034-S Pepa Raraunga PDF	CPS22-NO00A10-SNCSNCWF-RI0GCVAR-W1034-S Tango Whakahoki	Tapunga CPS22-NO00A10-SNCSNCWF-RI0GCVAR-W1034-S
Hokona CPS22-NO00A10-SNCSNCWF-RI0GCVAR-W1034-S	Hokona CPS22-NO00A10-SNCSNCWF-RI0GCVAR-W1034-S	Hokona Schurter CPS22-NO00A10-SNCSNCWF-RI0GCVAR-W1034-S
Schurter CPS22-NO00A10-SNCSNCWF-RI0GCVAR-W1034-S	Kaiwhakarato Schurter	Kaitoha Kaatawhai Schurter
Schurter CPS22-NO00A10-SNCSNCWF-RI0GCVAR-W1034-S	Schurter Inc. CPS22-NO00A10-SNCSNCWF-RI0GCVAR-W1034-S	

Ngā Hua e hāngai ana

<p>CPS22-NO00A10-SNCSNCWF-RI0GCVAR-W1033-S Kaihanga: Schurter Whakaahuatanga: SWITCH PUSH SPST-NO 100MA 42V I roto i te taonga: Out stock</p> <p style="text-align: center; background-color: #cccccc; padding: 5px; font-weight: bold;">RFQ</p>	<p>CPS22-NO00A10-SNCSNCWF-RI0GCVAR-W1036-S Kaihanga: Schurter Whakaahuatanga: SWITCH PUSH SPST-NO 100MA 42V I roto i te taonga: Out stock</p> <p style="text-align: center; background-color: #cccccc; padding: 5px; font-weight: bold;">RFQ</p>
<p>CPS22-NO00A10-SNCSNCWF-RI0GCVAR-W1028-S Kaihanga: Schurter Whakaahuatanga: SWITCH PUSH SPST-NO 100MA 42V I roto i te taonga: Out stock</p> <p style="text-align: center; background-color: #cccccc; padding: 5px; font-weight: bold;">RFQ</p>	<p>CPS22-NO00A10-SNCSNCWF-RI0GCVAR-W1032-S Kaihanga: Schurter Whakaahuatanga: SWITCH PUSH SPST-NO 100MA 42V I roto i te taonga: Out stock</p> <p style="text-align: center; background-color: #cccccc; padding: 5px; font-weight: bold;">RFQ</p>
<p>CPS22-NO00A10-SNCSNCWF-RI0GCVAR-W1031-S Kaihanga: Schurter Whakaahuatanga: SWITCH PUSH SPST-NO 100MA 42V I roto i te taonga: Out stock</p> <p style="text-align: center; background-color: #cccccc; padding: 5px; font-weight: bold;">RFQ</p>	<p>CPS22-NO00A10-SNCSNCWF-RI0GCVAR-W1038-S Kaihanga: Schurter Whakaahuatanga: SWITCH PUSH SPST-NO 100MA 42V I roto i te taonga: Out stock</p> <p style="text-align: center; background-color: #cccccc; padding: 5px; font-weight: bold;">RFQ</p>
<p>CPS22-NO00A10-SNCSNCWF-RI0GCVAR-W1035-S Kaihanga: Schurter Whakaahuatanga: SWITCH PUSH SPST-NO 100MA 42V I roto i te taonga: Out stock</p> <p style="text-align: center; background-color: #cccccc; padding: 5px; font-weight: bold;">RFQ</p>	<p>CPS22-NO00A10-SNCSNCWF-RI0GCVAR-W1039-S Kaihanga: Schurter Whakaahuatanga: SWITCH PUSH SPST-NO 100MA 42V I roto i te taonga: Out stock</p> <p style="text-align: center; background-color: #cccccc; padding: 5px; font-weight: bold;">RFQ</p>
<p>CPS22-NO00A10-SNCSNCWF-RI0GCVAR-W1030-S Kaihanga: Schurter Whakaahuatanga: SWITCH PUSH SPST-NO 100MA 42V I roto i te taonga: Out stock</p> <p style="text-align: center; background-color: #cccccc; padding: 5px; font-weight: bold;">RFQ</p>	<p>CPS22-NO00A10-SNCSNCWF-RI0GCVAR-W1040-S Kaihanga: Schurter Whakaahuatanga: SWITCH PUSH SPST-NO 100MA 42V I roto i te taonga: Out stock</p> <p style="text-align: center; background-color: #cccccc; padding: 5px; font-weight: bold;">RFQ</p>
<p>CPS22-NO00A10-SNCSNCWF-RI0GCVAR-W1029-S Kaihanga: Schurter Whakaahuatanga: SWITCH PUSH SPST-NO 100MA 42V I roto i te taonga: Out stock</p> <p style="text-align: center; background-color: #cccccc; padding: 5px; font-weight: bold;">RFQ</p>	<p>CPS22-NO00A10-SNCSNCWF-RI0GCVAR-W1037-S Kaihanga: Schurter Whakaahuatanga: SWITCH PUSH SPST-NO 100MA 42V I roto i te taonga: Out stock</p> <p style="text-align: center; background-color: #cccccc; padding: 5px; font-weight: bold;">RFQ</p>