





Schurter




CPS22-LA00A10-SNCCWTWF-AI0RWVAR-W1053-S

Tau Wae:	CPS22-LA00A10-SNCCWTWF-AI0RWVAR-W1053-S
Kaihanga / Waitohu:	Schurter
Whakaahuatanga hua	SWITCH PUSHBUTTON SPST 100MA 42V
Ngā Rauemi:	 CPS22-LA00A10-SNCCWTWF-AI0RWVAR-W1053-S.pdf
RoHS Tūnga	 Whakahaerehia te kore utu / RoHS
Tuhinga mai i	Hong Kong
Te Ara Tuhi	DHL/Fedex/TNT/UPS/EMS

[TONO MO TE WHAKAHUA](#)

Ko te whakaahua he tohu. Tirohia nga korero mo nga taipitopito hua.











 
 
Ngā whakaaturanga o CPS22-LA00A10-SNCCWTWF-AI0RWVAR-W1053-S

TAU WAE	CPS22-LA00A10-SNCCWTWF-AI0RWVAR-W1053-S
KAIHANGA	Schurter
WHAKAAHUATANGA	SWITCH PUSHBUTTON SPST 100MA 42V
WHAKAHAERE TOKO WHAKAHAERE / ROHS TŪNGA	Whakahaerehia te kore utu / RoHS
PEPA RARAUNGA	 CPS22-LA00A10-SNCCWTWF-AI0RWVAR-W1053-S.pdf
WHAKAAETANGA NGAOHIKO - DC	60V
WHAKAAETANGA NGAOHIKO - AC	42V
MOMO	Capacitive, Illuminated
KĀHUA WHAKAMUTUNGA	Wire Leads
WHAKAWHITI MAHINGA	Off-On
RAUPAPA	CPS
PIHANGA WHAKAPAE PAEPAE	Circular - 22.10mm Dia
PACKAGING	Bulk
TAE MAHI	-40°C ~ 60°C
MOMO TAE	Panel Mount, Front
TAUMATA WHAKAARO MOE (MSL)	1 (Unlimited)
TE MAHI MOMO	-
WHAKAHAERE TOKO WHAKAHAERE / ROHS TŪNGA	Lead free / RoHS Compliant
TIAKI INGOA	IP67 - Dust Tight, Waterproof
WHAKAKAMAHI WHAKAKUKU (NOMINAL)	5 ~ 28 VDC
MOMO WHAKAMARAMA, TAE	LED, Red/White
NGĀ ĀHUATANGA	Ceramic Actuator, Finger Guide, CTRL Symbol
TE ORANGA RAWA	-
WHAKAAHUATANGA TAIPITOPITO	Pushbutton Switch SPST Capacitive, Illuminated Panel Mount, Front
WHAKATAURANGA ONAMATA	100mA (AC/DC)
TAE - KAIHOAHOA / KAPORO	Clear (White Filter/Diffuser)
TAKAHANGA	SPST
MOMO KAIHOKO	Round, Button, Flush

Ngā tūtohu e hāngai ana

Schurter CPS22-LA00A10-SNCCWTWF-AI0RWVAR-W1053-S	Kaitoha CPS22-LA00A10-SNCCWTWF-AI0RWVAR-W1053-S	Kaiwhakarato CPS22-LA00A10-SNCCWTWF-AI0RWVAR-W1053-S
Utu CPS22-LA00A10-SNCCWTWF-AI0RWVAR-W1053-S	Pikitia CPS22-LA00A10-SNCCWTWF-AI0RWVAR-W1053-S	Whakaahua CPS22-LA00A10-SNCCWTWF-AI0RWVAR-W1053-S
CPS22-LA00A10-SNCCWTWF-AI0RWVAR-W1053-S Pepa Raraunga PDF	CPS22-LA00A10-SNCCWTWF-AI0RWVAR-W1053-S Tango Whakahoki	Tapunga CPS22-LA00A10-SNCCWTWF-AI0RWVAR-W1053-S
Hokona CPS22-LA00A10-SNCCWTWF-AI0RWVAR-W1053-S	Hokona CPS22-LA00A10-SNCCWTWF-AI0RWVAR-W1053-S	Hokona Schurter CPS22-LA00A10-SNCCWTWF-AI0RWVAR-W1053-S
Schurter CPS22-LA00A10-SNCCWTWF-AI0RWVAR-W1053-S	Kaiwhakarato Schurter	Kaitoha Kaatawhai Schurter
Schurter CPS22-LA00A10-SNCCWTWF-AI0RWVAR-W1053-S	Schurter Inc. CPS22-LA00A10-SNCCWTWF-AI0RWVAR-W1053-S	

Ngā Hua e hāngai ana

 <p>CPS22-LA00A10-SNCCWTWF-AI0RWVAR-W1052-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p>RFQ</p>	 <p>CPS22-LA00A10-SNCCWTWF-AI0RWVAR-W1056-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p>RFQ</p>
 <p>CPS22-LA00A10-SNCCWTWF-AI0RWVAR-W1055-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p>RFQ</p>	 <p>CPS22-LA00A10-SNCCWTWF-AI0RWVAR-W1054-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p>RFQ</p>
 <p>CPS22-LA00A10-SNCCWTWF-AI0RWVAR-W1049-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p>RFQ</p>	 <p>CPS22-LA00A10-SNCCWTWF-AI0RWVAR-W1058-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p>RFQ</p>
 <p>CPS22-LA00A10-SNCCWTWF-AI0RWVAR-W1050-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p>RFQ</p>	 <p>CPS22-LA00A10-SNCCWTWF-AI0RWVAR-W1059-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p>RFQ</p>
 <p>CPS22-LA00A10-SNCCWTWF-AI0RWVAR-W1048-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p>RFQ</p>	 <p>CPS22-LA00A10-SNCCWTWF-AI0RWVAR-W1051-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p>RFQ</p>
 <p>CPS22-LA00A10-SNCCWTWF-AI0RWVAR-W1057-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p>RFQ</p>	 <p>CPS22-LA00A10-SNCCWTWF-AI0RWVAR-W1047-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p>RFQ</p>