

Schurter

CPS16-LA00A10-SNCCWTNF-AI0RCVAR-W1009-S

Tau Wae:	CPS16-LA00A10-SNCCWTNF-AI0RCVAR-W1009-S
Kaihanga / Waitohu:	Schurter
Whakaahuatanga hua	SWITCH PUSHBUTTON SPST 100MA 42V
Ngā Rauemi:	CPS16-LA00A10-SNCCWTNF-AI0RCVAR-W1009-S.pdf
RoHS Tūnga	Whakahaerehia te kore utu / RoHS
Tuhinga mai i	Hong Kong
Te Ara Tuhi	DHL/Fedex/TNT/UPS/EMS

TONO MO TE WHAKAHUA

Ko te whakaahua he tohu. Tirohia nga korero mo nga taipitopito hua.

Ngā whakaaturanga o CPS16-LA00A10-SNCCWTNF-AI0RCVAR-W1009-S

TAU WAE	CPS16-LA00A10-SNCCWTNF-AI0RCVAR-W1009-S
KAIHANGA	Schurter
WHAKAAHUATANGA	SWITCH PUSHBUTTON SPST 100MA 42V
WHAKAHAERE TOKO WHAKAHAERE / ROHS TŪNGA	Whakahaerehia te kore utu / RoHS
PEPA RARAUNGA	CPS16-LA00A10-SNCCWTNF-AI0RCVAR-W1009-S.pdf
WHAKAAETANGA NGAOHIKO - DC	60V
WHAKAAETANGA NGAOHIKO - AC	42V
MOMO	Capacitive, Illuminated
KĀHUA WHAKAMUTUNGA	Wire Leads
WHAKAWHITI MAHINGA	Off-On
RAUPAPA	CPS
PIHANGA WHAKAPAE PAEPAE	Circular - 16.10mm Dia
PACKAGING	Bulk
TAE MAHI	-40°C ~ 60°C
MOMO TAE	Panel Mount, Front
TAUMATA WHAKAARO MOE (MSL)	1 (Unlimited)
TE MAHI MOMO	-
WHAKAHAERE TOKO WHAKAHAERE / ROHS TŪNGA	Lead free / RoHS Compliant
TIAKI INGOA	IP67 - Dust Tight, Waterproof
WHAKAKAMAHI WHAKAKUKU (NOMINAL)	5 ~ 28 VDC
MOMO WHAKAMARAMA, TAE	LED, Red/Cyan
NGĀ ĀHUATANGA	Ceramic Actuator, I Symbol
TE ORANGA RAWA	-
WHAKAAHUATANGA TAIPITOPITO	Pushbutton Switch SPST Capacitive, Illuminated Panel Mount, Front
WHAKATAURANGA ONAMATA	100mA (AC/DC)
TAE - KAIHOAHOA / KAPORO	Clear (White Filter/Diffuser)
TAKAHANGA	SPST
MOMO KAIHOKO	Round, Button, Flush

Ngā tūtohu e hāngai ana

Schurter CPS16-LA00A10-SNCCWTNF-AI0RCVAR-W1009-S	Kaitoha CPS16-LA00A10-SNCCWTNF-AI0RCVAR-W1009-S	Kaiwhakarato CPS16-LA00A10-SNCCWTNF-AI0RCVAR-W1009-S
Utu CPS16-LA00A10-SNCCWTNF-AI0RCVAR-W1009-S	Pikitia CPS16-LA00A10-SNCCWTNF-AI0RCVAR-W1009-S	Whakaahua CPS16-LA00A10-SNCCWTNF-AI0RCVAR-W1009-S
CPS16-LA00A10-SNCCWTNF-AI0RCVAR-W1009-S Pepa Raraunga PDF	CPS16-LA00A10-SNCCWTNF-AI0RCVAR-W1009-S Tango Whakahoki	Tapunga CPS16-LA00A10-SNCCWTNF-AI0RCVAR-W1009-S
Hokona CPS16-LA00A10-SNCCWTNF-AI0RCVAR-W1009-S	Hokona CPS16-LA00A10-SNCCWTNF-AI0RCVAR-W1009-S	Hokona Schurter CPS16-LA00A10-SNCCWTNF-AI0RCVAR-W1009-S
Schurter CPS16-LA00A10-SNCCWTNF-AI0RCVAR-W1009-S	Kaiwhakarato Schurter	Kaitoha Kaatawhai Schurter
Schurter CPS16-LA00A10-SNCCWTNF-AI0RCVAR-W1009-S	Schurter Inc. CPS16-LA00A10-SNCCWTNF-AI0RCVAR-W1009-S	

Ngā Hua e hāngai ana

<p>CPS16-LA00A10-SNCCWTNF-AI0RCVAR-W1004-S Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p style="background-color: #ccc; padding: 2px; text-align: center; font-weight: bold;">RFQ</p>	<p>CPS16-LA00A10-SNCCWTNF-AI0RCVAR-W1013-S Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p style="background-color: #ccc; padding: 2px; text-align: center; font-weight: bold;">RFQ</p>
<p>CPS16-LA00A10-SNCCWTNF-AI0RCVAR-W1011-S Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p style="background-color: #ccc; padding: 2px; text-align: center; font-weight: bold;">RFQ</p>	<p>CPS16-LA00A10-SNCCWTNF-AI0RCVAR-W1006-S Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p style="background-color: #ccc; padding: 2px; text-align: center; font-weight: bold;">RFQ</p>
<p>CPS16-LA00A10-SNCCWTNF-AI0RCVAR-W1014-S Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p style="background-color: #ccc; padding: 2px; text-align: center; font-weight: bold;">RFQ</p>	<p>CPS16-LA00A10-SNCCWTNF-AI0RCVAR-W1007-S Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p style="background-color: #ccc; padding: 2px; text-align: center; font-weight: bold;">RFQ</p>
<p>CPS16-LA00A10-SNCCWTNF-AI0RCVAR-W1008-S Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p style="background-color: #ccc; padding: 2px; text-align: center; font-weight: bold;">RFQ</p>	<p>CPS16-LA00A10-SNCCWTNF-AI0RCVAR-W1005-S Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p style="background-color: #ccc; padding: 2px; text-align: center; font-weight: bold;">RFQ</p>
<p>CPS16-LA00A10-SNCCWTNF-AI0RCVAR-W1015-S Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p style="background-color: #ccc; padding: 2px; text-align: center; font-weight: bold;">RFQ</p>	<p>CPS16-LA00A10-SNCCWTNF-AI0RCVAR-W1010-S Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p style="background-color: #ccc; padding: 2px; text-align: center; font-weight: bold;">RFQ</p>
<p>CPS16-LA00A10-SNCCWTNF-AI0RCVAR-W1012-S Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p style="background-color: #ccc; padding: 2px; text-align: center; font-weight: bold;">RFQ</p>	<p>CPS16-LA00A10-SNCCWTNF-AI0RCVAR-W1003-S Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p style="background-color: #ccc; padding: 2px; text-align: center; font-weight: bold;">RFQ</p>