





**Schurter**



**SCHURTER**  
ELECTRONIC COMPONENTS


## CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1008-S

Tau Wae:	CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1008-S
Kaihanga / Waitohu:	Schurter
Whakaahuatanga hua	SWITCH PUSHBUTTON SPST 100MA 42V
Ngā Rauemi:	 <a href="#">CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1008-S.pdf</a>
RoHS Tūnga	 Whakahaerehia te kore utu / RoHS
Tuhinga mai i	Hong Kong
Te Ara Tuhi	DHL/Fedex/TNT/UPS/EMS

TONO MO TE WHAKAHUA

Ko te whakaahua he tohu. Tirohia nga korero mo nga taipitopito hua.





 
### Ngā whakaaturanga o CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1008-S

TAU WAE	CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1008-S
KAIHANGA	Schurter
WHAKAAHUATANGA	SWITCH PUSHBUTTON SPST 100MA 42V
WHAKAHAERE TOKO WHAKAHAERE / ROHS TŪNGA	Whakahaerehia te kore utu / RoHS
PEPA RARAUNGA	 <a href="#">CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1008-S.pdf</a>
WHAKAAETANGA NGAOHIKO - DC	60V
WHAKAAETANGA NGAOHIKO - AC	42V
MOMO	Capacitive, Illuminated
KĀHUA WHAKAMUTUNGA	Wire Leads
WHAKAWHITI MAHINGA	Off-On
RAUPAPA	CPS
PIHANGA WHAKAPAE PAEPAE	Circular - 19.10mm Dia
PACKAGING	Bulk
TAE MAHI	-40°C ~ 60°C
MOMO TAE	Panel Mount, Front
TAUMATA WHAKAARO MOE (MSL)	1 (Unlimited)
TE MAHI MOMO	-
WHAKAHAERE TOKO WHAKAHAERE / ROHS TŪNGA	Lead free / RoHS Compliant
TIAKI INGOA	IP67 - Dust Tight, Waterproof
WHAKAKAMAHI WHAKAKUKU (NOMINAL)	5 ~ 28 VDC
MOMO WHAKAMARAMA, TAE	LED, Yellow/Magenta
NGĀ ĀHUATANGA	Ceramic Actuator, Finger Guide, H Symbol
TE ORANGA RAWA	-
WHAKAAHUATANGA TAIPITOPITO	Pushbutton Switch SPST Capacitive, Illuminated Panel Mount, Front
WHAKATAURANGA ONAMATA	100mA (AC/DC)
TAE - KAIHOAHOA / KAPORO	Clear (White Filter/Diffuser)
TAKAHANGA	SPST
MOMO KAIHOKO	Round, Button, Flush

### Ngā tūtohu e hāngai ana

Schurter CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1008-S	Kaitoha CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1008-S	Kaiwhakarato CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1008-S
Utu CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1008-S	Pikitia CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1008-S	Whakaahua CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1008-S
CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1008-S Pepa Raraunga PDF	CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1008-S Tango Whakahoki	Tapunga CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1008-S
Hokona CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1008-S	Hokona CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1008-S	Hokona Schurter CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1008-S
Schurter CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1008-S	Kaiwhakarato Schurter	Kaitoha Kaatawhai Schurter
Schurter CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1008-S	Schurter Inc. CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1008-S	

### Ngā Hua e hāngai ana

 <p><b>CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1006-S</b></p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p style="text-align: center; background-color: #ccc; padding: 5px;"><b>RFQ</b></p>	 <p><b>CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1007-S</b></p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p style="text-align: center; background-color: #ccc; padding: 5px;"><b>RFQ</b></p>
 <p><b>CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1011-S</b></p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p style="text-align: center; background-color: #ccc; padding: 5px;"><b>RFQ</b></p>	 <p><b>CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1005-S</b></p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p style="text-align: center; background-color: #ccc; padding: 5px;"><b>RFQ</b></p>
 <p><b>CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1010-S</b></p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p style="text-align: center; background-color: #ccc; padding: 5px;"><b>RFQ</b></p>	 <p><b>CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1012-S</b></p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p style="text-align: center; background-color: #ccc; padding: 5px;"><b>RFQ</b></p>
 <p><b>CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1003-S</b></p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p style="text-align: center; background-color: #ccc; padding: 5px;"><b>RFQ</b></p>	 <p><b>CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1013-S</b></p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p style="text-align: center; background-color: #ccc; padding: 5px;"><b>RFQ</b></p>
 <p><b>CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1009-S</b></p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p style="text-align: center; background-color: #ccc; padding: 5px;"><b>RFQ</b></p>	 <p><b>CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1014-S</b></p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p style="text-align: center; background-color: #ccc; padding: 5px;"><b>RFQ</b></p>
 <p><b>CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1004-S</b></p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p style="text-align: center; background-color: #ccc; padding: 5px;"><b>RFQ</b></p>	 <p><b>CPS19-LA00A10-SNCCWTWF-AI0YMPVAR-W1002-S</b></p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p style="text-align: center; background-color: #ccc; padding: 5px;"><b>RFQ</b></p>