





Schurter




CPS16-NO00A10-SNCCWTWF-AI0WGVAR-W1045-S

| | |
|---------------------|---|
| Tau Wae: | CPS16-NO00A10-SNCCWTWF-AI0WGVAR-W1045-S |
| Kaihanga / Waitohu: | Schurter |
| Whakaahuatanga hua | SWITCH PUSH SPST-NO 100MA 42V |
| Ngā Rauemi: |  CPS16-NO00A10-SNCCWTWF-AI0WGVAR-W1045-S.pdf |
| RoHS Tūnga |  Whakahaerehia te kore utu / RoHS |
| Tuhinga mai i | Hong Kong |
| Te Ara Tuhi | DHL/Fedex/TNT/UPS/EMS |

[TONO MO TE WHAKAHUA](#)

Ko te whakaahua he tohu. Tirohia nga korero mo nga taipitopito hua.










 
 
Ngā whakaaturanga o CPS16-NO00A10-SNCCWTWF-AI0WGVAR-W1045-S

| | |
|---|---|
| TAU WAE | CPS16-NO00A10-SNCCWTWF-AI0WGVAR-W1045-S |
| KAIHANGA | Schurter |
| WHAKAAHUATANGA | SWITCH PUSH SPST-NO 100MA 42V |
| WHAKAHAERE TOKO WHAKAHAERE / ROHS TŪNGA | Whakahaerehia te kore utu / RoHS |
| PEPA RARAUNGA |  CPS16-NO00A10-SNCCWTWF-AI0WGVAR-W1045-S.pdf |
| WHAKAAETANGA NGAOHIKO - DC | 60V |
| WHAKAAETANGA NGAOHIKO - AC | 42V |
| MOMO | Capacitive, Illuminated |
| KĀHUA WHAKAMUTUNGA | Wire Leads |
| WHAKAWHITI MAHINGA | Off-Mom |
| RAUPAPA | CPS |
| PIHANGA WHAKAPAE PAEPAE | Circular - 16.10mm Dia |
| PACKAGING | Bulk |
| TAE MAHI | -40°C ~ 60°C |
| MOMO TAE | Panel Mount, Front |
| TAUMATA WHAKAARO MOE (MSL) | 1 (Unlimited) |
| TE MAHI MOMO | - |
| WHAKAHAERE TOKO WHAKAHAERE / ROHS TŪNGA | Lead free / RoHS Compliant |
| TIAKI INGOA | IP67 - Dust Tight, Waterproof |
| WHAKAKAMAHI WHAKAKUKU (NOMINAL) | 5 ~ 28 VDC |
| MOMO WHAKAMARAMA, TAE | LED, White/Green |
| NGĀ ĀHUATANGA | Ceramic Actuator, Finger Guide, Arrow Symbol |
| TE ORANGA RAWA | - |
| WHAKAAHUATANGA TAIPITOPITO | Pushbutton Switch SPST-NO Capacitive, Illuminated Panel Mount, Front |
| WHAKATAURANGA ONAMATA | 100mA (AC/DC) |
| TAE - KAIHOAHOA / KAPORO | Clear (White Filter/Diffuser) |
| TAKAHANGA | SPST-NO |
| MOMO KAIHOKO | Round, Button, Flush |

Ngā tūtohu e hāngai ana

| | | |
|---|---|---|
| Schurter CPS16-NO00A10-SNCCWTWF-AI0WGVAR-W1045-S | Kaitoha CPS16-NO00A10-SNCCWTWF-AI0WGVAR-W1045-S | Kaiwhakarato CPS16-NO00A10-SNCCWTWF-AI0WGVAR-W1045-S |
| Utu CPS16-NO00A10-SNCCWTWF-AI0WGVAR-W1045-S | Pikitia CPS16-NO00A10-SNCCWTWF-AI0WGVAR-W1045-S | Whakaahua CPS16-NO00A10-SNCCWTWF-AI0WGVAR-W1045-S |
| CPS16-NO00A10-SNCCWTWF-AI0WGVAR-W1045-S Pepa Raraunga PDF | CPS16-NO00A10-SNCCWTWF-AI0WGVAR-W1045-S Tango Whakahoki | Tapunga CPS16-NO00A10-SNCCWTWF-AI0WGVAR-W1045-S |
| Hokona CPS16-NO00A10-SNCCWTWF-AI0WGVAR-W1045-S | Hokona CPS16-NO00A10-SNCCWTWF-AI0WGVAR-W1045-S | Hokona Schurter CPS16-NO00A10-SNCCWTWF-AI0WGVAR-W1045-S |
| Schurter CPS16-NO00A10-SNCCWTWF-AI0WGVAR-W1045-S | Kaiwhakarato Schurter | Kaitoha Kaatawhai Schurter |
| Schurter CPS16-NO00A10-SNCCWTWF-AI0WGVAR-W1045-S | Schurter Inc. CPS16-NO00A10-SNCCWTWF-AI0WGVAR-W1045-S | |

Ngā Hua e hāngai ana

| | |
|---|--|
|  <p>CPS16-NO00A10-SNCCWTWF-AI0WGVAR-W1039-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSH SPST-NO 100MA 42V I roto i te taonga: Out stock</p> <p>RFQ</p> |  <p>CPS16-NO00A10-SNCCWTWF-AI0WGVAR-W1047-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSH SPST-NO 100MA 42V I roto i te taonga: Out stock</p> <p>RFQ</p> |
|  <p>CPS16-NO00A10-SNCCWTWF-AI0WGVAR-W1050-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSH SPST-NO 100MA 42V I roto i te taonga: Out stock</p> <p>RFQ</p> |  <p>CPS16-NO00A10-SNCCWTWF-AI0WGVAR-W1043-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSH SPST-NO 100MA 42V I roto i te taonga: Out stock</p> <p>RFQ</p> |
|  <p>CPS16-NO00A10-SNCCWTWF-AI0WGVAR-W1048-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSH SPST-NO 100MA 42V I roto i te taonga: Out stock</p> <p>RFQ</p> |  <p>CPS16-NO00A10-SNCCWTWF-AI0WGVAR-W1051-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSH SPST-NO 100MA 42V I roto i te taonga: Out stock</p> <p>RFQ</p> |
|  <p>CPS16-NO00A10-SNCCWTWF-AI0WGVAR-W1040-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSH SPST-NO 100MA 42V I roto i te taonga: Out stock</p> <p>RFQ</p> |  <p>CPS16-NO00A10-SNCCWTWF-AI0WGVAR-W1042-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSH SPST-NO 100MA 42V I roto i te taonga: Out stock</p> <p>RFQ</p> |
|  <p>CPS16-NO00A10-SNCCWTWF-AI0WGVAR-W1046-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSH SPST-NO 100MA 42V I roto i te taonga: Out stock</p> <p>RFQ</p> |  <p>CPS16-NO00A10-SNCCWTWF-AI0WGVAR-W1049-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSH SPST-NO 100MA 42V I roto i te taonga: Out stock</p> <p>RFQ</p> |
|  <p>CPS16-NO00A10-SNCCWTWF-AI0WGVAR-W1041-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSH SPST-NO 100MA 42V I roto i te taonga: Out stock</p> <p>RFQ</p> |  <p>CPS16-NO00A10-SNCCWTWF-AI0WGVAR-W1044-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSH SPST-NO 100MA 42V I roto i te taonga: Out stock</p> <p>RFQ</p> |