




CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1024-S

| | |
|---------------------|---|
| Tau Wae: | CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1024-S |
| Kaihanga / Waitohu: | Schurter |
| Whakaahuatanga hua | SWITCH PUSHBUTTON SPST 100MA 42V |
| Ngā Rauemi: |  CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1024-S.pdf |
| RoHS Tūnga |  Whakahaerehia te kore utu / RoHS |
| Tuhinga mai i | Hong Kong |
| Te Ara Tuhi | DHL/Fedex/TNT/UPS/EMS |

[TONO MO TE WHAKAHUA](#)

Ko te whakaahua he tohu. Tirohia nga korero mo nga taipitopito hua.

Ngā whakaaturanga o CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1024-S

| | |
|---|---|
| TAU WAE | CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1024-S |
| KAIHANGA | Schurter |
| WHAKAAHUATANGA | SWITCH PUSHBUTTON SPST 100MA 42V |
| WHAKAHAERE TOKO WHAKAHAERE / ROHS TŪNGA | Whakahaerehia te kore utu / RoHS |
| PEPA RARAUNGA |  CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1024-S.pdf |
| WHAKAAETANGA NGAOHIKO - DC | 60V |
| WHAKAAETANGA NGAOHIKO - AC | 42V |
| MOMO | Capacitive, Illuminated |
| KĀHUA WHAKAMUTUNGA | Wire Leads |
| WHAKAWHITI MAHINGA | Off-On |
| RAUPAPA | CPS |
| PIHANGA WHAKAPAE PAEPAE | Circular - 19.10mm Dia |
| PACKAGING | Bulk |
| TAE MAHI | -40°C ~ 60°C |
| MOMO TAE | Panel Mount, Front |
| TAUMATA WHAKAARO MOE (MSL) | 1 (Unlimited) |
| TE MAHI MOMO | - |
| WHAKAHAERE TOKO WHAKAHAERE / ROHS TŪNGA | Lead free / RoHS Compliant |
| TIAKI INGOA | IP67 - Dust Tight, Waterproof |
| WHAKAKAMAHI WHAKAKUKU (NOMINAL) | 5 ~ 28 VDC |
| MOMO WHAKAMARAMA, TAE | LED, Cyan/Green |
| NGĀ ĀHUATANGA | Finger Guide, X Symbol |
| TE ORANGA RAWA | - |
| WHAKAAHUATANGA TAIPITOPITO | Pushbutton Switch SPST Capacitive, Illuminated Panel Mount, Front |
| WHAKATAURANGA ONAMATA | 100mA (AC/DC) |
| TAE - KAIHOAHOA / KAPORO | Silver |
| TAKAHANGA | SPST |
| MOMO KAIHOKO | Round, Button, Flush |

Ngā tūtohu e hāngai ana

| | | |
|---|---|---|
| Schurter CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1024-S | Kaitoha CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1024-S | Kaiwhakarato CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1024-S |
| Utu CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1024-S | Pikitia CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1024-S | Whakaahua CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1024-S |
| CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1024-S Pepa Raraunga PDF | CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1024-S Tango Whakahoki | Tapunga CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1024-S |
| Hokona CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1024-S | Hokona CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1024-S | Hokona Schurter CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1024-S |
| Schurter CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1024-S | Kaiwhakarato Schurter | Kaitoha Kaatawhai Schurter |
| Schurter CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1024-S | Schurter Inc. CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1024-S | |

Ngā Hua e hāngai ana

| | |
|--|---|
|  <p>CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1023-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p>RFQ</p> |  <p>CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1025-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p>RFQ</p> |
|  <p>CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1030-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p>RFQ</p> |  <p>CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1020-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p>RFQ</p> |
|  <p>CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1019-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p>RFQ</p> |  <p>CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1022-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p>RFQ</p> |
|  <p>CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1021-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p>RFQ</p> |  <p>CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1026-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p>RFQ</p> |
|  <p>CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1027-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p>RFQ</p> |  <p>CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1029-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p>RFQ</p> |
|  <p>CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1018-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p>RFQ</p> |  <p>CPS19-LA00A10-SNCSNCWF-RI0CGVAR-W1028-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: Out stock</p> <p>RFQ</p> |